



FRAME SCREW L WITH SHARP POINT

Mounting in concrete and wood

ESSVE
GET IT DONE

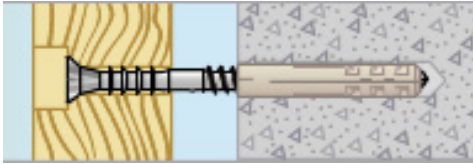

1. Installation in concrete. Pre-drill the concrete \varnothing 6.0 mm, drill depth about 40 mm for the ESSVE N-plug 6x30

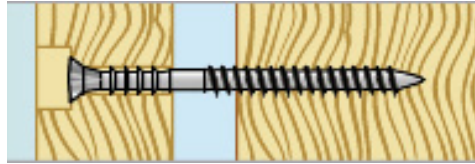

2. Installation in wood can be performed very quickly. No need for pre-drilling. Frame screw L is machine-driven directly into the wooden stud.